



GarrettCom[®]

Industrial Networking at Its Best[™]

Magnum PES42P PoE Edge Switches



Installation and User Guide

[www . GarrettCom . com](http://www.GarrettCom.com)

\$5.00 USD

Magnum™ PES42 Series Edge Switch

Installation and User Guide

Part #: 84-00141 Rev. A (07/07)

Trademarks

GarrettCom, **Magnum**, **Link-Loss-Learn**, **S-Ring**, **Convenient Switch**, **Edge Switch** are trademarks and **Personal Hub** is a registered trademark of GarrettCom, Inc.
Ethernet is a trademark of Xerox Corporation
NEBS is a trademark of Telcordia Technologies
UL is a registered trademark of Underwriters Laboratories

Important: The Magnum PES42P-Series 10/100 Mb/s PoE Edge Switches contains no user serviceable parts. Attempted service by unauthorized personnel shall render all warranties null and void. If problems are experienced with Magnum PES42P 10/100 Mb/s Edge Switch products, consult Section 5, Troubleshooting, of this User Guide.

Copyright © 2007 GarrettCom, Inc. All rights reserved. No part of this publication may be reproduced without prior written permission from GarrettCom, Inc.
Printed in the United States of America.

Federal Communications Commission**Radio Frequency Interference Statement**

This equipment generates, uses and can radiate frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart J of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his own expense, will be required to take whatever measures may be required to correct the interference.

Contacting GarrettCom, Inc

Please use the mailing address, phone and fax numbers and email address listed below:

GarrettCom, Inc.

47823 Westinghouse Dr.

Fremont, CA 94539

Phone (510) 438-9071

Fax (510) 438-9072

Website: <http://www.GarrettCom.com>

Email: support@garrettcom.com

TABLE OF CONTENTS	Page
1.0 SPECIFICATIONS	1
1.1 Technical Specifications	1
1.2 Summary of models and descriptions from PES42P Series:	8
2.0 INTRODUCTION	10
2.1 Inspecting the Package and the Product.....	10
2.2 Product Description	11
2.3 Frame Buffering and Latency	18
2.4 Features and Benefits.....	22
2.5 Applications for PES42P Series Edge Switches	25
3.0 INSTALLATION.....	30
3.1 Locating the Edge Switch Unit	30
3.2 MC14-TRAY for Rack Mounting of PES42P Series PoE Switches	32
3.3 MC14-TR+PS9 MC14-TR+PS9X2 for Rack Mounting Media Edges	33
3.4 DIN-Rail mounting option.....	35
3.5 Power Requirement for Magnum PES42P (PoE) Edge Switch	36
3.6 Powering the PES42P (DC internal) with –48VDC power input.....	37

3.7	PES42P Series, DC-powered, -48VDC Installation	39
3.8	Connecting Ethernet Media for PES42P PoE Edge Switch.....	41
3.8.1	Connecting Twisted Pair (RJ-45, CAT 3 or CAT 5)	42
3.8.2	Connecting Fiber Optic ST-type, "twist-lock"	43
3.8.3	Connecting Fiber Optic SC-type, "Snap-In"	44
3.8.4	Connecting Single-Mode Fiber Optic	44
3.8.5	Power Budget Calculations for PES42P Series, Fiber Media....	45
3.8.6	Connections to NICs which support Auto-Neg RJ-45 ports.....	47
3.8.7	Mounting Dimensions for PES42P with metal brackets.....	48
4.0	OPERATION	51
4.1	Dual-Speed Functionality, and Switching	51
4.2	Auto-cross (MDIX), Auto-negotiation and Speed-sensing	53
4.3	Dual LEDs, Front-panel and side-panel (Magnum PES42P- Series)	54
4.4	Hardware operated Alarm Contact for monitoring internal power supply	55
5.0	TROUBLESHOOTING	56
5.1	Before Calling for Assistance	57
5.2	When Calling for Assistance	60

5.3	Return Material Authorization (RMA) Procedure	61
5.4	Shipping and Packaging Information.....	62
APPENDIX A: WARRANTY INFORMATION.....		64

Revisions

Rev A 07/07: Initial release of this user manual for PES42P PoE Edge Switches

GarrettCom, Inc. reserves the right to change specifications, performance characteristics and/or model offerings without notice.

1.0 SPECIFICATIONS**1.1 Technical Specifications****Ports Performance**

When a port is operating at 100Mbps:

Data Rate: 100Mbps

When a port is operating at 10 Mbps:

Data Rate: 10 Mbps

Network Standards

100Mb: Ethernet IEEE 802.3u, 100BASE-TX, 100BASE-FX

10 Mb: Ethernet IEEE 802.3, 10BASE-T

Auto-sensing for speed: IEEE 802.3u

Packet-Processing Between Domains

Filter and Forward Rate from 100Mbps ports: 148,800 pps max

Filtering and Forwarding Rate from 10 Mbps ports: 14,880 pps max.

Processing type: Store and Forward, non-blocking

Auto-learning: 2K address table

Address buffer age-out time: 300 sec.

Packet buffers memory: 128KB, dynamically shared on all domains

Latency (not including packet time):	100 to 10 Mbps:	5 μ s
	10 to 100Mbps:	15 μ s

Path Delay Value: 50 BT on all ports

LLL(Link-Loss-Learn): Factory default is activated on port 1 and 2 (allow to flush the internal address buffer , and qualify to use with S-Ring and RSTP for faster recovery in ring topology)

Maximum Ethernet Segment (or Domain) Lengths

10BASE-T (Unshielded twisted pair)	- 100 m (328 ft)
100BASE-TX (CAT 5 UTP)	- 100 m (328 ft)
100BASE-FX, half-duplex: (multi-mode)	- 412 m (1350 ft)
100BASE-FX, full-duplex: (multi-mode)	- 2 km (6,562 ft)
100BASE-FX, half-duplex: (single-mode)	- 412 m (1350 ft)
100BASE-FX, full-duplex: (single-mode)	- 20 km (65,620 ft)
100BASE-FX, full-duplex: (single-mode, long reach)	- 40 km (131,240 ft)

Operating Environment

PES42P: -40°F to 167°F (-40°C to 75°C) Long term per agency tests (UL).
-58°F to 212°F (-50°C to 100°C) Short term per IEC Type tests.

Storage Temperature

PES42P: -40°F to 160°F (-40°C to 85°C)

Cold Start:

PES42P to -40°C

Ambient Relative Humidity: 5% to 95% (non-condensing)

Altitude (All models): -200 to 5000ft. (-60 – 15,000 m)

Conformal Coating (optional) for humidity protection

Note: PES42P models are designed for NEBS compliance, including, vibration, shock and altitude.

Packaging:

Enclosure: Rugged sheet metal (Steel).

Dimensions of the Switch unit:

3.7 in H x 3.0 in W x 1.7 in D (9.4 cm x 7.6 cm x 4.3 cm)

Weight: all models: 9.5 oz. (285g);

Power supply, -d, and i: 5.8 oz (165g)

-Hd, and Hi: 5.8 oz (165g)

-Pd, and -Pi: 7.9 oz (225g)

Cooling Method:

Convection cooling is used for the office model. The hardened (H) factory floor and premium (P) temperature un-controlled location models have closed cases to withstand dirt and use special thermal techniques to transfer heat to the outside of the case for cooling.

ALARM RELAY Terminal Block, H and P models only, two screw terminals:

Internal 60VA relay contact: Open for power Off, closed for power On (Hardware).

AC POWER SUPPLY (using an external power adapter):

All models have an (8-15)VDC output with 6ft long cord and a 2.5mm center +ve jack. The external AC power supplies are temperature rated to match the Edge Switch ratings.

Option for 12VDC jack for wall mount , only be used to power the PES42P unit, when no PoE devices are attached, act as non-PoE switch.

Temperature un-controlled Premium(P) Ratings (-40 to 75°C)

North America (-Pd) models. Outdoor temperature rated. Input: 6ft AC power cord to IEC 320 connector on the 100-240vac 47-63Hz external power adapter.

Output: 12vdc, 2Amps.

International (-Pi) models. Outdoor temperature rated. Input: IEC 320 connector on the 100-240vac 47-63Hz external power adapter. Requires a user supplied power cord.

Output: 12vdc, 2Amps.

Power Consumption: See Section 3.6.

Note 1: the 12V DC jack can be used for dual source DC input using an AC adapter and the DC terminal block. Power supply protection is provided by internal diodes.

Note 2: The Direct DC power floats. The user may ground either “+” or “-” if desired.



Direct DC POWER SUPPLY : built-in terminal block for +, -, ground

-48V DC internal (range 46 to 60V DC), +, -, ground.

Total power input required: for PoE ports, 66 Watts max. OR 1.4A @48VDC

Power Consumption: Typical 3.5 watts, 4 watts maxm. (All six copper ports)

Power Consumption: Typical 7 watts, 8.5 watts maxm. (4 PoE+ 2 non-PoE fiber port)

Port Connectors:

RJ-45 Ports: support 100BASE-TX and 10BASE-T with auto-cross (MDIX). They are shielded 8-pin female connectors for shielded (STP) and unshielded (UTP) Cat 3, 4, 5 cable.

One Fiber optic port: On the ES42 Series it is 100Base-FX with a “fiber flavor” choice of multimode SC, ST, LC or MTRJ or single mode SSC, SSCL, SST or SLC connectors. (By default factory settings is at “Full” duplex on fiber ports)

LED Indicators (Front)

POWER: Steady ON when power applied

10/100: Steady ON for 100Mbps; OFF for 10 Mbps(copper ports only)

LK/ACT: Steady ON for LINK (LK) with no traffic, BLINKING indicates port is transmitting / receiving (ACT).

F/H: Steady ON for full-duplex, OFF for half-duplex (Fiber port only)

Mounting options

Metal mounting clips for panel mounting: included

DIN-Rail mounting option: Model # DIN-RAIL MC2 (see Section 3.4)

Rack-mount option: MC14-TRAY, see http://www.garrettcom.com/mc_tray.htm

Depth: 6.0", width: 17" Height: 2.25" (15cm D x 43cm W x 5.7cm H)

Mean Time Between Failure (MTBF) – over15 years, Telcordia (Bellcore) Method
Agency Approvals and Standards Compliance:

UL Listed (UL 60950), cUL, CE, Emissions meets FCC Part 15 Class A.

NEBS L3 and ETSI compliant.

IEEE P1613 Env. Std for Electric Power Substations

NEMA TS-2 and TEES for traffic control equipment

designed for UL 2043 above-the-ceiling installation

IEC61850 EMC and Operating Conditions Class C Power Substations

Warranty: Three years, return to factory

Made in USA

1.2 Summary of models and descriptions from PES42P Series:

PES42P-2ff-48VDC = Magnum 6 port Premium-rated PoE (802.3af) Power sourcing Edge switch, four RJ-45 (PoE)+ two 100Mb Fiber port(non-PoE) . Alarm contact for power monitoring, 48VDC terminal block for power input. Metal panel mounting brackets included.

The “2ff” field is for selection of the desired “fiber flavor” as listed below. The 1ff (one fiber +five RJ-45 ports) and no ff (six RJ-45 ports only)models are also same as below, except the port options.

PES42P Models (four RJ-45 10/100 with two100Mb fiber flavor option).

PES42P-2ff-48VDC = Premium (P), two 10/100 RJ-45+ two 100Mb non PoE Fiber ports for un-controlled(outdoor) (-40 to 75C) using direct DC (8-15VDC) and/or external AC premium power supply (included).

PES42P-1ff-48VDC = Same as PES42P-2FF-Pd,Pi except 1 100 Mb non PoE fiber port

PES42P-48VDC = Same as PES42P-2FF-Pd,Pi except with no fiber port options.

PES42P-2ff-48VDC = Same as PES42P-24VDC model, except -48VDC input replaces 24VDC.

“SC” = 100Base-FX-SC: multi-mode fiber optic with SC type connector, 2km.

“SSC”= 100Base-FX-SSC: single-mode fiber optic with SC type connector, 20km.

“SSCL”= 100Base-FX-SSCL: single-mode fiber optic with SC type connector, 40km.

“ST” = 100Base-FX-ST: multi-mode fiber optic with ST type connector, 2km.

“SST” = 100Base-FX-ST: single-mode fiber optic with ST type connector, 20km.

“SLC”= 100Base-FX-SLC: single-mode fiber optic with LC type connector, 15km.

“MTRJ”= 100Base-FX-MTRJ: multi-mode fiber optic with MTRJ type connector, 2km.

“SLC”= 100Base-FX-SLC: single-mode fiber optic with LC type connector, 15km.

“SFC”= 100Base-FX-SFC: single-mode fiber optic with FC Screw type connector, 20km.

“SSCX”= 100Base-FX-SSCX: single-mode fiber optic with SC type connector, 100km.

Accessories

MC14-TRAY = 19” Rack-mount tray for 14-series Switch models, up to 16 units

Other Tray configurations with power supplies and power cabling included - See Section 3.3

DIN-RAIL-MC2 = Metal DIN-Rail mounting bracket for one PES42P Series Switch,

See Section 3.4

Conformal Coating (for high humidity and “tropical” applications) - request quote.

2.0 INTRODUCTION

This section describes PES42P Series models, including appearance, features and typical applications.

2.1 Inspecting the Package and the Product

Examine the shipping container for obvious damage prior to installing this product; notify the carrier immediately of any damage that you believe occurred during shipment or delivery. Inspect the contents of this package for any signs of damage and ensure that the items listed below are included.

This package should contain:

- 1 Magnum PES42P Series PoE Edge Switch unit,
- 1 External Power Supply, (for -Pd and -Pi models only)
- 1 set Metal panel mounting clips and screws (2 each)
- 1 User Guide (this manual)

Remove the Magnum PES42P Series Edge Switch from the shipping container. Be sure to keep the shipping container should you need to ship the unit at a later date. In the event there are items missing or damaged contact your supplier. If you need to return the unit use the original shipping container. Refer to Section 5 Troubleshooting, for specific return procedures.

2.2 Product Description

Magnum PES42P : 4-port PoE and 2 port (LL) Power Source Switch

PES42P Industrial PoE switch is a reliable and premium-rated Industrial Ethernet product Switch and an addition to the PoE switch family of PES42P and 6K-PoE modules. Strictly designed to be IEEE 802.3af compatible, the 4 ports PoE Edge switch, not only provides PoE



options on port#3,4,5 and 6 but is also equipped with a LLL (Link-Loss-Learn) feature on port#1 and 2 for use in self healing redundant LAN structures. Enclosed in a rugged enclosure, designed and developed with premium-grade extended temperature components, Industrial-rated PES42P PoE Edge switches are suitable for use in sheltered outdoor locations and temperature-uncontrolled environments with a temperature rating of -40°C to 75°C .

The Magnum PES42P PoE Power source Edge Switch combines standard 802.3af Power over Ethernet (PoE) with a small heavy duty 4-port PoE ports and 2 100Mb Fiber or 10/100 RJ-45 ports, as per the user requirement. Using an external -48vdc power source, all four of the PES42P's Ethernet ports



can provide Power as well as 10/100 Mb data transmission over the inter-connecting Ethernet cables. So a single Ethernet twisted pair (RJ-45) cable will be able to transmit **voice, data and power** from the attached devices.

The PES42P Edge switches are Power Sourcing Equipment (PSE), and are fully compatible with Powered Devices (PD)(e.g wireless access points, IP phones) that comply with the IEEE 802.3af PoE standard.



NOTE: Only PoE powered devices complying with IEEE 802.3af are recommended to work successfully with PES42P power source PoE switches. NON-802.3af compliant PD devices might have COMPATIBILITY issues, and are not being supported with PES42P PoE switches.

The PES42P switch ports follow an auto-sensing algorithm, so that they provide power only to 802.3af, PoE end devices. **PoE is managed by a multi-stage handshake to protect equipment from damage and to manage power budgets.** The PES42P ports will discontinue supplying power when the PoE powered devices are disconnected (on incorrect impedance value). PES42P's support the 802.3af PoE PSE standard for over-current protection, under-current detection, and fault protection.

The PES42P is an 802.3af standards-compliant way to power and connect a few small Ethernet devices at the edge of a network where AC power is not cost-effective to deploy. Since PoE is rapidly emerging as an Ethernet option in industrial, commercial, outdoor and military applications, the Magnum PES42P is enabling the efficient deployment of reliable security cameras, VoIP and wireless access networking devices to increase the efficiency of heavy duty industrial communications. Furthermore, using PoE switches like the Magnum

PES42P can produce significant cost savings as well as flexibility and reliability over traditional AC-powered devices. The simplicity of PoE increases reliability and reduces the overall cost of installation and operation.

These are applications where the Magnum PES42P can be used to provide the power and data for these PoE Powered Devices, which require 12-13watts maximum.

- Wireless LAN access points and WLAN Mobility system
- VOIP phones
- Remote Security Camera
- SNTP Clock
- Factory floor and building control monitoring
(Temperature, Smoke, Heat and other environmental sensors).
- Fire alarms

-
- Security devices, like retinal scanners or fingerprint readers.
 - Lighting control.
 - Home automation systems

Because of the approval of 802.3af PoE standard, the RJ-45 Ethernet jack will become the first worldwide standard power plug. The futuristic applications of PoE looks promising as a convenient point (providing Notebook computer, Cell phone chargers, and PDA games power through the PoE devices).

The sleek and compact PES42P, featured with special thermal techniques for harsh temperatures and a hardened, rugged enclosure qualifies to provide a multi-purpose choice for all PoE device applications. The PES42P is a very important source to meet all IEEE 802.3af compliant PoE requirements with multi-choice options.

The Magnum PES42P(PoE) Switch provides edge access Ethernet ports in a convenient and compact package. For fiber connectivity of additional non- PoE ports, simply use port#1 and 2 (two RJ-45 or 100Mb fiber ports with LLL feature) to meet the Fiber and copper 10 or 100Mb requirements. (Please see sec. 1.2 or price list for correct model no.). All PES42P Power Source Edge Switch models come with two (2) sets of LED indicators. One set is mounted in the end adjacent to three of the RJ-4 ports for easy viewing when the unit is mounted in a rack mount tray.



The Magnum PES42P Power Source Switch requires a heavy-duty power supply of - 48VDC 1.4Amps (66 watts total consumption) to provide 13-15w power on each port to the PoE unit. The heavy duty Din rail mounted, -48V DC power supply can be purchased using this URL: <http://www.lanstore.com/ps.htm>

Note: *The 8-15vdc option is also being offered to power the PES42P unit, when **no** PoE devices are attached. While using a 12vdc Adaptor to power on the switch, the unit will not function as a PoE power source switch but as a non-PoE regular switch only.*

2.3 Frame Buffering and Latency

The Magnum PES42P-Series PoE Edge Switches are store-and-forward switches. Each frame (or packet) is loaded into the Switch's memory and inspected before forwarding can occur. This technique ensures that all forwarded frames are of a valid length and have

the correct CRC, i.e. they are good packets. This eliminates propagation of bad packets, enabling all of the available bandwidth to be used for valid information.

While other switching technologies such as "cut-through" or "express" impose minimal frame latency, they will also permit bad frames to propagate to the Ethernet network. The "cut-through" technique permits collision fragment frames, which are a result of late collisions, to be forwarded--which add to the network traffic. There is no way to filter frames with a bad CRC (the entire frame must be present in order for CRC to be calculated). Since collisions and bad packets are more likely when traffic is heavy, store-and-forward switch technology enables more bandwidth to be available for good packets when the traffic load is greatest.

To minimize the possibility of dropping frames on congested ports, each Magnum PES42P Series Edge Switch dynamically allocates buffer space from a 128KB memory pool, ensuring that heavily used ports receive very large buffer space for packet

storage. (Many other switches have their packet buffer storage space divided evenly across all ports, resulting in a small, fixed number of packets to be stored per port. When the port buffer fills up, dropped packets result.) This dynamic buffer allocation provides the capability for the maximum resources of the Magnum PES42P Series unit to be applied to all traffic loads, even when the traffic activity is unbalanced across the ports. Since the traffic on an operating network is constantly varying in packet density per port and in aggregate density, the Magnum PES42P Series Edge Switches are constantly adapting internally to provide maximum network performance with the least dropped packets.

When the Switch detects that its free buffer queue space is low, the Switch sends industry standard (full-duplex only) PAUSE packets out to the devices sending packets to cause “flow control”. This tells the sending devices to temporarily stop sending traffic, which allows a traffic catch-up to occur without dropping packets. Then, normal packet buffering and processing resumes. This flow-control sequence occurs in a small fraction of a second and is transparent to an observer.

Another feature implemented in Magnum PES42P Series Edge Switches is a collision-based flow-control mechanism (when operating at half-duplex only). When the Switch detects that its free buffer queue space is low, the Switch prevents more frames from entering by forcing a collision signal on all receiving half-duplex ports in order to stop incoming traffic.

The latency (the time the frame spends in the Switch before it is sent along or forwarded to its destination) of the PES42P Series PoE Edge Switches varies with the port-speed types. The length of the frame is a variable as it is with all store-and-forward switches. For 10 Mb-to-10 Mb, 10 Mb-to-100Mb or 100Mb-to-10 Mb forwarding, the latency is 15 microseconds plus the packet time of 10 Mb. For 100Mb-to-100Mb forwarding, the latency is 5 microseconds plus the packet time of 100Mb.

2.4 Features and Benefits

- **Full 100Mb or 10 Mb switching services for high performance Ethernet**

Magnum PES42P Series PoE Switches provide Fast Ethernet switching on all ports. They perform high speed filter/forward operations on the traffic, giving each port's segment a full 100Mb (or 10 Mb) of bandwidth.

- **PES42P, economical 4-port 10/100 Power Source Switch for PoE devices**

The compact and robust PES42P(PoE) acts as a Power plug for all the PoE devices, e.g CCTV camera, VOIP phone, digital clock, and wireless point through its RJ-45 ports and provides a convenient cost-effective power source. The two fiber or copper ports 1 & 2 is featured with LLL (Link-Loss-Learn) and helps in faster recovery for redundant application.

- **Reduces Network Costs and provide economical solution**

Magnum PES42P Series PoE Switches offer the ideal solution to efficiently and inexpensively connect a Twisted Pair and fiber network with 10Mb or 100Mb and help to expand the Ethernet network in a very convenient and economical way.

- **Choice of one or two 100Mb Fiber option, more efficient**

Designed as a multi-purpose media Edge Switch, the 100Mb fiber port allows the user to convert the media from copper to fiber and the other RJ-45 port can be used as a diagnostic port for more connectivity.

- **Installation is “Plug and Play”, operation is transparent to software**

The Magnum PES42P Series PoE Switches operate as hardware switches, only forwarding those packets from each domain that are needed on the other domains. Internal address tables are self-learning, enabling users to change port connections or 10/100 domains without affecting operations.

- **Two sets of LEDs for viewing status from any angle.**

Each PES42P Series PoE Edge Switch is equipped with two sets (front and side) of LEDs to provide status information when viewed at almost any angle or mounting arrangement whether rack (MC14- Tray) or Din-Rail mounted.

- **Rugged metal case, Industrial grade** PES42P Series have a robust design and are packaged in a rugged sheet metal enclosure to ensure high reliability and durability even when placed in industrial or outdoor applications.

■ Qualified to use for temperature un-controlled “outdoor” application

The Magnum PES42P Premium rated versions of Edge Switches have an ambient temperature rating between -40°C to $+75^{\circ}\text{C}$ for DC models and qualify for temperature un-controlled “outdoor” applications.

■ Efficient Compact design, for all purpose convenient mounting

Featuring a compact steel case with an external AC and internal DC power supply, Magnum PES42P Series of Edge Switches can be installed in small spaces in cabinets, on table tops, in racks, walls or DIN-Rail mounted and in trays such as the Magnum MC14-TRAY.

■ MDIX ports to eliminate cross-over cables while cascading All the Magnum PES42P Series Switches are featured with MDIX (auto-cross), which easily allows cascading with other Switches, Hubs or media Edges without using the cross-over cable.**■ DC-Power input for PoE Power Source Switch(PS14P)**

The 802.3af PoE standard PS14P power source switch requires 1.4 Amp-48VDC to provide enough power for 13-15watts on each RJ-45 port. The Terminal block for -48V DC input is a range of 46V to 60V DC.

■ **Hardware operated Alarm terminal block for hardened model PES42P-Series**

The Alarm contact option on PES42PH and PES42P enables monitoring for internal power failure, and provides extra reliability to the hardened Switch

■ **Link-Loss-Learn feature for faster recovery in redundant network**

The LLL feature qualifies the Edge switches to actively work along with Managed redundant network structure as a client switch and allow a faster recovery during ring break. The redundant topology must have one managed switch with STP/RSTP feature to control the ring.


2.5 Applications for PES42P Series Edge Switches

Example 1. Magnum PES42P (Power Source Switch) for PoE device only

This example is an Industrial application, where the expansion of their factory network is being done to extend their capacity and make it more secure via IP Videp surveillance cameras which monitor the day-to day manufacturing process. The blue tooth wireless- access point was also implemented to eliminate the cable

wiring between the PS14P (PoE) switches. The un-controlled temperature and the electric wiring were the big challenges to meet at this requirement.

The Magnum PS14P(PoE) Power source switch is an effective and convenient solution for remote locations where providing power through wire is not only difficult but expensive too. The cost-effective and efficient Magnum PS14P with its robust enclosure provides a very economical solution through its 4-PoE RJ-45 ports. The Power Source Switch with PoE ports are capable of carrying data, power, and voice over RJ-45 cable using Magnum PS14P(PoE) units. All PoE enhanced cameras and access points would be directly connected to a power source PES42P switch to get the power in the unit via the copper port. The security camera application is getting very popular in sensitive areas e.g school, airport, Bus/Train Terminal, Industrial secure location, port and various other important locations.




www.GarrettCom.com

In another application for the modern power plant floor, the requirement is to provide the complete floor with wireless access points to avoid cabling mess and connect all the status delivery joints with VOIP phones.

The New PES42P(PoE) 802.3af compatible, power source switches fit very well to fulfill this requirement. The PES42P's are cost-effective, economical and avoid additional electrical cable expansions and related expenses. The sleek industrial proof Magnum PES42P(PoE) with its power Source Switch capability, easily meets the demand to provide power through its RJ-45 cable, and allows for a very neat Network setup.

The Magnum PES42P(POE) is enabling the efficient deployment of reliable VoIP and wireless access tools to increase the efficiency of communication across the enterprise. Furthermore, using PoE devices like the Magnum PS14P(PoE) has significant cost savings, flexibility, and reliability advantages over traditional AC power. They reduce the overall cost of network ownership. The PoE devices used for this industrial application are VOIP for voice, Wireless access points for wi-fi connection, and a PoE Clock to synchronize the time with the SNTP server for correct timing. This application for Industrial/power utility locations is becoming more popular for securing premises and is accepted as a cost effective solution for multi-location communication.

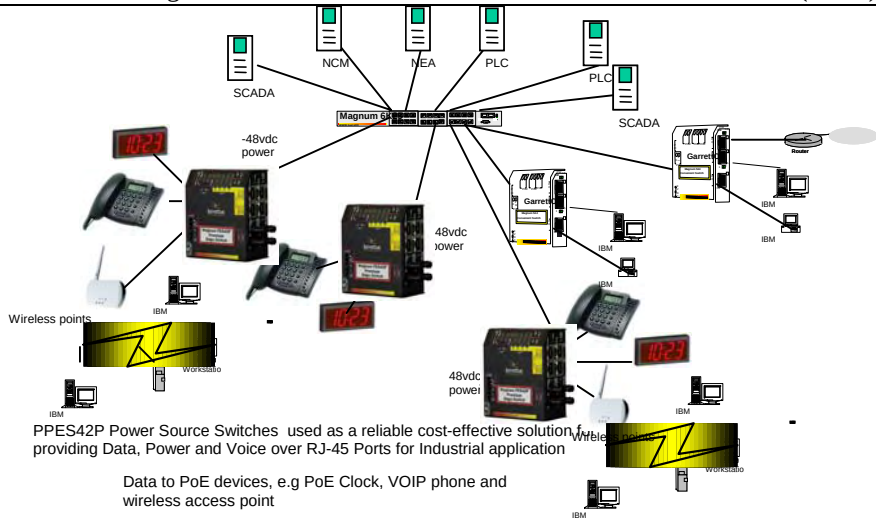


3.0 INSTALLATION

This section describes the installation of the Magnum PES42P Series PoE Edge Switches, including location, mountings, power supply options and media connections.

3.1 Locating the Edge Switch Unit

All the PES42P Series Switches operate in transparent half-and full-duplex mode. The store and forward switches easily take care of network traffic and can be used as a useful, economical tool to expand an existing network.

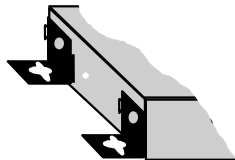

Secure attachment of clips for panel -

The compact and lightweight design of the Magnum PES42P Series allows it to be easily installed in almost any location. A Velcro strip may be used for mounting the unit on a vertical surface such as a wall or cabinet, or for securing the unit on a table-top or shelf. Alternatively, metal mounting clips and screws are included for a rugged and secure mounting in any orientation.

Installation of the Magnum PES42P Series PoE Edge Switch is a simple procedure. The installation location is dependent upon the physical layout of the Ethernet network and associated cabling. Make sure the unit is installed in a location that is easily accessible to an AC power outlet or the appropriate DC source and where cooling is not inhibited. The green Power (PWR) LED must turn ON when power is applied.

3.2 MC14-TRAY for Rack Mounting of PES42P Series PoE Switches

For 19" rack-mounting of Magnum PES42P series Edge Switches, a rack-mount tray is available, the MC14-TRAY. The Edge Switches are mounted with the DC power jack in the back, with the fiber and the RJ-45 connectors in the front. Any mix of the Edge Switches and/or



Media Edges may be placed on a tray, up to a maximum of 8 units. (The mounting spaces of the MC14-TRAY are specific to the Magnum products and will not permit other models to be properly mounted).

In a typical installation, the MC14-TRAY, 19" rack-mount tray will hold a few (three to eight) PES42P Series PoE Edge Switches, with their power supplies plugged into power strips (not included) in the rear area of the tray. Metal mounting screws in the bottom-front hold the Edge Switches firmly in place. The beveled-top edge of the units permits the LEDs of each unit to be viewed for operational status, even when the units are very close together.

3.3 MC14-TR+PS9 and MC14-TR+PS9X2 for Rack Mounting Media Edges

The MC14-TR+ PS9 and MC14-TR+PS9X2 are other options for rack mounting the mix of Magnum 10Mbps and 100Mbps PoE Edge Switches and Media Edges together in a 19" rack-mount tray. These models come with built-in common universal AC power supply rated at 55 watts at 50°C ambient, 9VDC output, and supporting up to 2-3 Switches for MC14-TR+PS9 and 5 units PES42P Series for MC14-TR+PS9X2. The MC14-TR+PS9X2 Model has two groups of eight units per power supply. The power supplies have auto-ranging AC input for use worldwide.

Installation and User Guide (07/07)

The side-view < here is an example of an installation of the model MC14-TR+PS9, 19" rack-mount tray, holding a few PES42P's, and 14E Media converters, each with their power input plugged into the built-in common AC power supply in the rear area of the tray. (AC PS units that come with the office models of the PoE Edge Switch's are not used). Because of the thicker size, only eight PES42P units can fit in one MC14-TRAY.



Metal mounting screws in the bottom-front hold each of the PoE Edge Switches, securing them in the tray and enabling separate removal for service. The dual LEDs permit viewing of Edge Switch status from any angle.

3.4 DIN-Rail mounting option

The Magnum PES42P PoE Edge Switches, designed for use in “Factory Floor” Industrial Ethernet environments, are available for DIN-Rail mounting in an enclosure having DIN Rails



A Magnum PES42P is shown alongside the DIN-Rail-MC2 bracket here ->

The metal DIN-Rail mounting hardware is optional and needs to be ordered as a separate item, e.g. Model #DIN-RAIL-MC2. It comes with four screws to attach the bracket to the MC unit. The rail clip is spring-loaded

with a pull-up latch at the top for easy “snap-on” attachment and removal.

The Magnum PES42P models with “PR” have -48VDC power, and have the DIN-Rail-MC2 bracket included and assembled with the MC unit at the factory.

3.5 Power Requirement for Magnum PES42P (PoE) Edge Switch

POWER INPUT:

Total Power Consumption: 66 watts max. (1.5A @48VDC) (4PoE+2 non-PoE) copper

Total Power Consumption: 66 watts max. (1.6A@48VDC) (4PoE copper+2 non-PoE fiber)

Terminal block for -48v DC input (range of 46 to 60V dc), built in for +, -, ground.

Note: The 8-15V DC option is also present, but can only be used to power the PES42P(POE) unit when no PoE devices are attached. The device will not function as PoE Switch while powered up via 12VDC power, but as a normal non-PoE Switch.

POWER OUTPUT:

PoE available on all four RJ-45 ports via Ethernet twisted pair cabling on port pins using the data pair 1,2(-), 3,6(+).

802.3af Power Consumption: 66 watts max. (15.4(max)/port)

PoE Ports Output voltage: 46 to 57 VDC

Over Current Protection, per port: reset able fuse

Power Consumption: Typical 3.5 watts, 4 watts maxm. (All six copper ports)

Power Consumption: Typical 7 watts, 8.5 watts maxm. (4 PoE+ 2 non-PoE fiber port)

Worst case Power input- 70 Watts

Note: Din-Rail mounted, Powerful -48vdc supply used for Magnum PES42P(POE) can be bought directly using this URL: <http://www.lanstore.com/ps.htm>

3.6 Powering the PES42P (DC internal) with -48VDC power input

Each Magnum PES42P-Series is equipped with an internal DC power supply, and has built-in screw terminals for secure attachment of the power input leads. Three DC power models support a range of power input types. The three DC power input terminal block choices are for use with -48VDC power. Where an AC power adaptor is used, DC is supplied via the jack.




Power input from the DC terminal block and the jack may be connected simultaneously for power input redundancy.

DC Power Terminals: “+”, “-”, gnd

GND: Terminal for “earth” or ground wire connection to the PES42PH chassis

Input Voltage: -48VDC

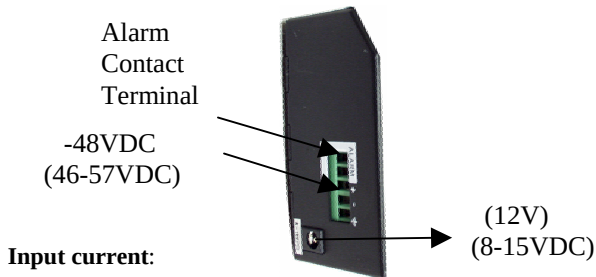

3.7 PES42P Series, DC-powered, -48VDC Installation

This section describes the proper connection of the -48VDC leads to the DC power terminal block on the Magnum PES42P PoE Edge Switch (as shown in the Figure). The DC terminal block on the Magnum PES42P is located on the left side of the unit and is equipped with three (3) screw-down lead posts. The power terminals are identified as positive (+) and negative (-), and they are floating inside the unit so that either of the terminals may be grounded by the user if desired. The chassis is “earth” or ground (GND). The connection procedure is straightforward. Simply insert



the DC leads to the PES42P's power terminals, positive (+) and negative (-) screws. The use of Ground (GND) optional; it connects to the PES42P chassis. Ensure that each lead is securely tightened from the top, as shown on above picture with arrow.

NOTE: Always use a voltmeter to measure the voltage of the incoming power supply and figure out the +ve potential lead or -ve potential lead. The more +ve potential lead will connect to the post labeled "+ve" and the rest to the "-ve".

The GND can be hooked up at the last.

When power is applied, the green PWR LED will illuminate.

3.8 Connecting Ethernet Media for PES42P PoE Edge Switch

The Magnum PES42P-Series PoE Edge Switches can be connected to two media types i.e. fiber and copper (RJ-45) types, run at 100BASE-TX, 10BASE-T and 100BASE-FX only. CAT 5 cables should be used when making 100BASE-TX connections. When the ports are used as 10BASE-T ports, CAT 3 may be used. In either case, the maximum distance for unshielded twisted pair cabling is 100 meters (328 ft). For fiber port 10BASE-FL or 100BASE-FX multi-mode, 50/125 or 62.5/125 microns cabling can be used, whereas for single-mode, 9/125 microns cabling should be used. Fiber cabling supports much longer cable distance and higher bandwidths as compared to copper wiring.

<u>Media</u>	<u>IEEE Standard</u>	<u>Connector</u>
Twisted Pair (CAT 3 or 5)	10BASE-T	RJ-45
Twisted Pair (CAT 5)	100BASE-TX	RJ-45
Fiber (Multi-mode)	100BASE-FX	ST, SC
Fiber (Single-mode)	100BASE-FX	SC, LC
Fiber (Multi-mode)	100BASE-FX	MTRJ

NOTE : *It is recommended that high quality CAT. 5 cables (which work for both 10 Mbps and 100Mbps) be used whenever possible in order to provide flexibility in a mixed-speed network, since PES42P-series switch ports are auto-sensing for either 10 and 100Mbps. Note that the auto-cross function does not operate, if the port is fixed or not supporting auto-negotiation.*

3.8.1 Connecting Twisted Pair (RJ-45, CAT 3 or CAT 5, Unshielded or Shielded)

The following procedure describes how to connect a 10BASE-T or 100BASE-TX twisted pair segment to the RJ-45 port. The procedure is the same for both unshielded and shielded twisted pair cables.

1. Using standard twisted pair media, insert either end of the cable with a RJ-45 plug into the RJ-45 connector of the port. Note that, even though the connector is shielded, either unshielded or shielded cables and wiring may be used.
2. Connect the other end of the cable to the corresponding device.
3. Use the LINK LED to ensure proper connectivity by noting that the LED will be illuminated when the unit is powered and proper connection is established. If this

does not help, ensure that the cable is connected properly and that the device on the other end is powered and is not defective.

4. For Port # 1 or 1SW, if the LINK LED is not illuminated, move the switch which has a cross-over or up-link for linking to another hub or Switch.

3.8.2 Connecting Fiber Optic **ST-type**, “twist-lock”

The following procedure applies to installations using ST-type fiber connectors. This procedure applies to ports using multi-mode ST fiber connectors.

1. Before connecting the fiber optic cable, remove the protective dust caps from the tips of the fiber connectors. Save these dust caps for future use.
2. Wipe clean the ends of the dual connectors with a soft cloth or lint-free lens tissue dampened in alcohol. Make certain the connectors are clean before connecting.

Note: *One strand of the duplex fiber optic cable is coded using color bands at regular intervals; you must use the color-coded strand on the associated ports at each end of the fiber optic segment.*

3. Connect the Transmit (TX) port (light colored post) on the Magnum Fiber port to the Receive (RX) port of the remote device. Begin with the color-coded strand of the cable for this first TX-to-RX connection.
4. Connect the Receive (RX) port (dark colored post) to the Transmit (TX) port of the remote device. Use the non-color coded fiber strand for this.

5. The LINK LED on the front of the fiber connector will illuminate when a proper connection has been established at both ends (and when power is ON in the unit). If LINK is not lit after cable connection, the normal cause is improper cable polarity. Swap the fiber cables at the fiber connector to remedy this situation.

3.8.3 **Connecting Fiber Optic SC-type, "Snap-In"**

The following procedure applies to installations using SC-type fiber connectors, i.e., using multi-mode SC and SC single-mode. While connecting fiber media to SC connectors, simply snap on the two square male connectors into the SC female jacks of the Fiber connector until it clicks and secures.

3.8.4 **Connecting Single-Mode Fiber Optic**

When using single-mode fiber cable, be sure to use single-mode fiber port connectors. Single-mode fiber cable has a smaller diameter than multi-mode fiber cable (9/125 microns for single-mode, 50/125 or 62.5/125 microns for multi-mode where xx/xx are the diameters of the core and the core plus the cladding respectively). Single-mode fiber allows full bandwidth at longer distances, about 20Km with the multi-mode SC.

The same procedures as for multi-mode fiber apply to single-mode fiber connectors. Follow the steps listed in Section 3.8.2 above.

3.8.5 Power Budget Calculations for PES42P Series, Fiber Media

Receiver Sensitivity and Transmitter Power are the parameters necessary to compute the power budget. To calculate the power budget of different fiber media installations using Magnum products, the following equations should be used:

$$\text{OPB (Optical Power Budget)} = P_T(\text{min}) - P_R(\text{min})$$

where P_T = Transmitter Output Power, and P_R = Receiver Sensitivity

$$\text{Worst case OPB} = \text{OPB} - 1\text{dB}(\text{for LED aging}) - 1\text{dB}(\text{for insertion loss})$$

$$\text{Worst case distance} = \{\text{Worst case OPB, in dB}\} / [\text{Cable Loss, in dB/Km}]$$

where the “Cable Loss” for 62.5/125 and 50/125 μm (m.m.) is 2.8 dB/km,

and the “Cable Loss” for 100/140 (Multi-mode) is 3.3 dB/km,

and the “Cable Loss” for 9/125 (Single-mode) is 0.5 dB/km

and the “Cable Loss” for 9/125 (Single-mode) is 0.25 dB/km (SSCX)

The following data has been collected from component manufacturer’s (Agilent’s, JDS-Uniphase, stratus, Lucent’s) web sites and catalogs to provide guidance to network integrators and installers-

Fiber Port Module	Speed, Std.	Mode	Std. km fdx (hdx)	Wavelength nm	Cable Size μm	X'mittr Output P _T , dB	R'cvr Sens. P _R , dB	Worst OPB, dB	Worst* distance Km, fdx	typical OPB, dB	typical* distance Km, fdx
PES42P-MST, MSC	100Mb FX	Multi-mode	2 (0.4)	1310	62.5/125 50/125	-20 -23.5	-31 -31	9.0 5.5	2.5 2.0	14 12	5 4
PES42P-SSC	100Mb FX	Single-mode	20 (0.4)	1310	9/125	-15	-31	14	28	17.5	35
PES42P-MTRJ	100Mb FX	Multi-mode	2 (0.4)	1310	62.5/125 50/125	-20 -23.5	-31 -31	9.0 5.5	3.0 2.0	15.8 12.2	5.5 4.0
Long Reach	100Mb FX	Single-mode	40 (0.4)	1310	9/125	-5	-34	27	54	32.5	65
PES42P-LC	100Mb FX	Single-mode	15+	1310	9/125	-15	-28	11	22	-	-
PES42P-SSCX	100Mb FX	Single-mode	100	1550	9/125	-5	-35	28	112	-	-
PES42P-FX	100Mb FX	Single-mode	20 (0.4)	1310	9/125	-16	-32	14	28	-	-

*** Note:** *The use of either multi-mode or single-mode fiber to operate at 100Mbps speed over long distances (i.e., over approx. 400 meters) can be achieved **only** if the following factors are both applied:*

- The 100Mb fiber segment must operate in full-duplex (FDX) mode, and*
- The worst-case OPB of the fiber link must be greater than the fiber cable's passive Attenuation.*

(Attenuation = Cable loss + LED aging loss + Insertion loss + safety factor)

3.8.6 Connections to NICs which support Auto-Negotiation, RJ-45 ports

The copper ports of Magnum PES42P-PoE Edge Switches will function properly with NICs (Network Interface Cards) which support Auto-Negotiation, and the Fast Link Pulse (FLP) coding for the 100BASE-TX signaling system. When connecting a NIC to the PES42P-Series, it may be necessary to reload the NIC drivers on the user device if the NIC has been communicating with a protocol other than 100BASE-TX (such as 10BASE-T). When 100Mb operation is agreed and in use, the 10/100 LED is illuminated steady ON and is OFF if 10 Mbps traffic is in use.

3.8.7 Mounting Dimensions for PES42P with metal brackets


Each Mangum PES42P PoE switch is supplied with metal mounting brackets and screws to mount the unit securely on a panel or wall. It is recommended to mount the units vertically, as shown below, for proper cooling and long-life reliability. It is also advisable to mount the unit with space for air movement around the top and the sides, typically a minimum of 1 inch.

Note that the metal brackets supplied hold the back of the PES42P PoE unit out from the panel or wall behind it, creating a rear space of about ¼ inch or 1cm. This allows air circulation and cooling of the rear part of the case.

For best cooling of the PES42P-Series, attach the metal brackets to metal (rather than wood or plastic). Attaching to metal helps conduct heat away from the PES42P-Series through the metal brackets and into the metal support structure.

Since the PES42P-Series has special internal thermal techniques (patent pending) to

move

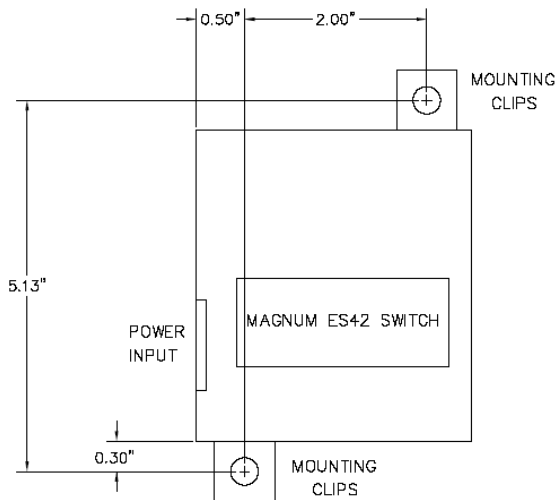

the heat generated by the electronic components inside into the case, the case may be quite warm to the touch during normal operation.

The unit is mounted using the brackets as shown in the illustration above. The spacing for the mounting screws into the supporting wall or panel is a rectangle 12.82 x 5 cm (5.13" x 2.00 inches) center-to-center.

4.0 OPERATION

4.1 Dual-Speed Functionality, and Switching

The Magnum PES42P Series Edge Switches provide SIX switched ports with combination of fiber and copper or copper only. The architecture supports a dual speed switching environment, with standard auto-negotiation capability.

The switched RJ-45 ports are full- or half-duplex auto-sensing for mode and speed, and auto-cross for plug polarity. (See Section 4.2). When the connected device is 10 Mbps, the PES42Ps obey all the rules of 10 Mbps Ethernet configurations. The 10 Mbps users can “communicate” with 100Mbps users as well as other 10 Mbps users through the switch. Similarly, the 100Mbps traffic obeys the rules of 100Mbps Ethernet, and can communicate with 10 Mb and 100Mb users. Magnum PES42P Series units are plug-and-

play devices. There is no software configuring to be done at installation or for maintenance, even for the LLL ports. The internal functions of both are described below.

Switching, Filtering and Forwarding

Each time a packet arrives on one of the switched ports, the decision is taken to either filter or to forward the packet. Packets whose source and destination addresses lie on the same port segment will be filtered, constraining them to one port and relieving the rest of the network from processing them. A packet whose destination address is on another port segment will be forwarded to the appropriate port, and will not be sent to the other ports where it is not needed. Packets needed for maintaining the operation of the network (such as occasional multi-cast packets) are forwarded to all ports. The Magnum PES42P Series Edge Switches operate in the store-and-forward switching mode, which eliminates bad packets and enables peak performance to be achieved when there is heavy traffic on the network.

Switching, Address Learning

The Magnum PES42P Series units have address table capacity of 2K node addresses, and are suitable for use in large networks. They are self-learning, so that as

nodes are added or removed or moved from one segment to another, the PES42P-Series switch automatically keeps up with node locations.

An address-aging algorithm causes least-used addresses to fall out in favor of new frequently-used addresses. To reset the address buffer, cycle power down-and-up.

4.2 Auto-cross (MDIX), Auto-negotiation and Speed-sensing

The RJ-45 ports support auto-cross (MDI or MDIX) in the auto-negotiation mode according to the IEEE 802.3u standard. No crossover cables are needed on RJ-45 port, when connecting the PES42P-Series to other unmanaged switches, legacy hubs, managed switches, media-converter etc. Please note that there can be conditions with managed switches where the switch manager fixes the port settings via software, and the result of the auto-negotiation is changed in the managed switch by the manager commands. In such cases, the 10/100 speed or the F/H mode may be affected, but auto-cross in the PES42P-Series switches will still work. The auto-cross function cannot be disabled.

When an RJ-45 cable connection is made, and each time LINK is enabled, auto-negotiation takes place (except for legacy products, which do not have auto-

negotiation and which go to the default state accordingly). The Magnum PES42P-Series Switches advertises its capability for 10 or 100 Mbps speed and F/H duplex mode, and the device at the other end of the cable should similarly advertise / respond. Both sides will agree to the speed and mode to be used per the IEEE 802.3u standard. Depending upon the devices connected, this will result in agreement to operate at either 10 Mbps or 100Mbps speed, and full- or half-duplex mode.

4.3 Dual LEDs, Front-panel and side-panel (Magnum PES42P- Series)

<u>LED</u>	<u>Description</u>
-------------------	---------------------------

PWR	Illuminates GREEN to indicate power applied.
------------	--

LK/ ACT	Steady ON for LINK w/no traffic, blinking for activity per port. LINK will turn off in the event connectivity is lost between the ends of the twisted pair segment or a loss of power occurs in the unit or remote device. The Link ports are also represented by LA1, LA2, LA3...LA6. (Steady On or steady Off indicates no Receive Activity).
----------------	---

10/100 Steady ON for 100Mb speed, OFF for 10Mb speed per port (copper ports)

F/H (FH1, FH2) Steady ON for Full duplex (F/D) mode, OFF for Half duplex (H/D) mode per port (For fiber port only)

NOTE: The port#1 and 2 is being assigned for copper or fiber port for different models. On all copper 10/100 ports model (e.g PES42P-d), the LEDs 10 or 100 denotes for copper port only. For the model 4copper +2 fiber or 5copper +1fiber,(e.g PES42PH-ff-Hd) the F or H denotes for fiber port only.

4.4 Hardware operated Alarm Contact for monitoring internal power supply

The two screws Alarm Contact features are standard on Magnum PES42P-Series, H and P and provide Normally Closed (NC) contacts to which the user can attach one sets of status monitoring wires at the green terminal block. When this option is present, the terminal block for Alarm Contacts is part of the Power Input panel in the Magnum PES42Ps case. The DC power input connection is in the same panel.



The NC Alarm Contact is held close when there is power on the main board inside of the PES42P. This provides a “Hardware operated Alarm” because the NC contacts will open when internal power is lost, either from an external power down condition or by the failure of the power supply inside of the Magnum PES42P-Series Switches.

Useful info about Alarm Contacts in PES42P:

1. Two-position terminal block (1,2) provided next to the DC power input, as shown above.
2. The Alarm Relay contact connected to the two terminals (1,2) is hardware operated.
3. By default it is NC (normally closed). It will open if there is any loss of power to the electronics inside of the unit.

5.0 TROUBLESHOOTING

All Magnum Ethernet products are designed to provide reliability and consistently high performance in all network environments. The installation of Magnum PES42P Series 10/100 Mb/s Switches is a straightforward procedure (see

INSTALLATION, Section 3.0); the operation is also straightforward and is discussed in Section 4.

Should problems develop during installation or operation, this section is intended to help locate, identify and correct these types of problems. Please follow the suggestions listed below prior to contacting your supplier. However, if you are unsure of the procedures described in this section or if the Magnum PES42P Series 10/100 Mb/s Switch is not performing as expected, do not attempt to repair the unit; instead contact your supplier for assistance or contact GarrettCom Customer Support.

5.1 Before Calling for Assistance

1. If difficulty is encountered when installing or operating the unit, refer back to the Installation Section of the applicable chapter of this manual. Also check to make sure that the various components of the network are interoperable.

2. Check the cables and connectors to ensure that they have been properly connected and the cables/wires have not been crimped or in some way impaired during installation. (About 90% of network downtime can be attributed to wiring and connector problems.)
3. If the fiber port does not link up while connecting to other device, do a quick Loop test to test the fiber transceiver is functional or not. Use a short patch cable of fiber and connect one end of cable to transmit and other end of receive to the fiber port transceiver. If the Link Led turns solid green, then the fiber port is functional and working.
4. Make sure that an AC power cord is properly attached to each Magnum PES42P-Series unit. Be certain that the AC power cord is plugged into a functioning and appropriate electrical outlet. Use the PWR LEDs to verify each unit is receiving power.

5. If the problem is isolated to a network device other than the Magnum PES42P Series 10/100 Mb/s switch product, it is recommended that the problem device is replaced with a known good device. Verify whether or not the problem is corrected. If not, go to Step 6 below. If the problem is corrected, the Magnum PES42P Series Switch and its associated cables are functioning properly.
6. If the problem continues after completing Step 5 above, contact your supplier of the Magnum PES42P Series 10/100 Mb/s Switch unit or if unknown, contact GarrettCom, Inc by fax, phone or email - (*support@garrettcom.com*) for assistance.

5.2 When Calling for Assistance

Please be prepared to provide the following information.

1. A complete description of the problem, including the following points:
 - a. The nature and duration of the problem;
 - b. Situations/Environment when the problem occurs;
 - c. The components/devices involved in the problem;
 - d. Any particular application that, when used, appears to create the problem;
2. An accurate list of GarrettCom product model(s) involved, with serial number(s). Include the date(s) that you purchased the products from your supplier.
3. It is useful to include other network equipment models and related hardware, including Convenient computers, workstations, terminals and printers; plus, the various network media types being used, along with diagram of network setup.
4. A record of changes that have been made to your network configuration prior to the occurrence of the problem. Any changes to system administration procedures should all be noted in this record.

5.3 Return Material Authorization (RMA) Procedure

All returns for repair must be accompanied by a Return Material Authorization (RMA) number. To obtain an RMA number, please use this URL -

https://rma.garrettcom.com/rma/rma_request_noaccount.php to fill out the form.

Please have the following information readily available:

Name and phone number of your contact person.

Name of your company / institution

Your shipping address

Product name

Serial Number (or Invoice Number)

Packing List Number (or Sales Order Number)

Date of installation

Failure symptoms, including a full description of the problem.

GarrettCom will carefully test and evaluate all returned products, will repair products that are under warranty at no charge, and will return the warranty-repaired units to the sender with shipping charges prepaid (see Warranty Information, Appendix A, for complete details). However, if the problem or condition causing the return cannot be duplicated by GarrettCom, the unit will be returned as:

No Problem Found.

GarrettCom reserves the right to charge for the testing of non-defective units under warranty. Testing and repair of product that is not under warranty will result in a customer (user) charge.

5.4 Shipping and Packaging Information

Should you need to ship the unit back to GarrettCom, please follow these instructions:

1. Package the unit carefully. It is recommended that you use the original container if available. Units should be wrapped in a "bubble-wrap" plastic sheet or bag for shipping protection. (You may retain all connectors and this Installation Guide.)

CAUTION: Do not pack the unit in Styrofoam "popcorn" type packing material.

This material may cause electro-static shock damage to the unit.

2. Clearly mark the Return Material Authorization (RMA) number on the outside of the shipping container.
3. GarrettCom is not responsible for your return shipping charges.
4. Ship the package to:
GarrettCom, Inc.
47823 Westinghouse Dr.
Fremont, CA 94539
Attn.: Customer Service

APPENDIX A: WARRANTY INFORMATION

GarrettCom, Inc. warrants its products to be free from defects in materials and workmanship for a period of three (3) years from the date of shipment by GarrettCom. During this warranty period, GarrettCom will repair or, at its option, replace components in the products that prove to be defective at no charge other than shipping and handling, provided that the product is returned pre-paid to GarrettCom.

This warranty will not be effective if, in the opinion of GarrettCom, the product has been damaged by misuse, misapplication, or as a result of service or modification other than by GarrettCom. GarrettCom reserves the right to make a charge for handling and inspecting any product returned for warranty repair which turns out not to be faulty.

Please complete the warranty card as this acts as a product registration, and mail it to GarrettCom within two weeks of your purchase.